


Rio Rand Advanced Technology Gun Lock Instruction Manual

How to reset and use your trigger lock

(RECOMMENDED) BY FOLLOWING THESE STEPS :

1. Set the combination lock dials to "0-0-0" across from the white arrow and between the red dash marks.
2. Insert the free end of the cable into the lock body.
3. Using a ball-point pen, press and hold the combination reset button located on the bottom of the cable lock body.
4. Rotate the combination lock dials across from the white arrow and between the red dash marks — to the desired 3-digit combination.
5. Release the combination reset button. Note the new 3-digit combination, and store it in a safe place.
6. To test the new combination: rotate the combination lock dials to the new combination, and press the cable release button to release the free end of the cable. If the free end of the cable releases from the cable lock body, the new combination is correct and set.

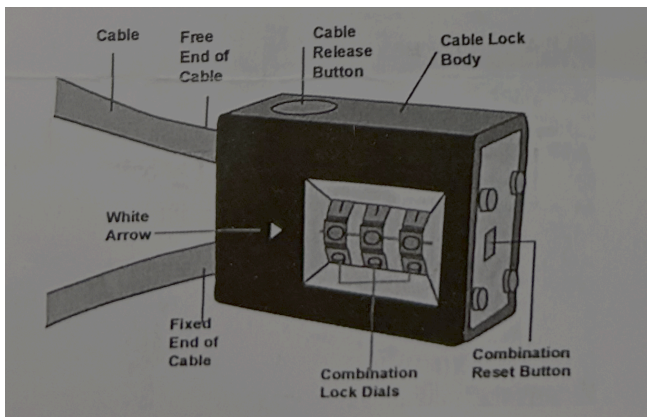

REMEMBER

No Firearm's safety of lock can be a substitute for safe, careful gun handling and storage. This lock is intended to discourage unauthorized access to a firearm, particularly by young children. This lock may be defeated by a determined individual using tools or other aggressive means and may not prevent intentional misuse of a firearm.

GUN LOCK SAFETY TIPS:

- Keep cable and lock outside of trigger guard at all times.
- Always insert the free end of the cable into the lock body and ensure the cable is securely locked in place after scrambling the combination so the current combination is not showing.
- Do not work the firearm's action with the lock in place. This may damage the lock and/or the firearm. If the lock's protective coating becomes damaged or separated from the steel cable or the lock face, replace the lock.

Warning:

It can't be opened if you forget the password

You can take down the password in case you forget it.

Limited Lifetime Warranty:

If this product fails due to a defect in materials or workmanship at any time during the life of the product, RioRand will replace it free of charge. This warranty does not cover products that have been abused, altered, damaged, misused, cut or worn.

Contact Us:

If you have any questions about the locks, please reach out to the Round Rock ISD Police Department through Let's Talk under Student and Campus Safety and "Police non-emergency contact," and they will reach out to you.